

Driver installation manual.

This manual describes how to install the driver for the LID572/573/575. The driver will create a comport for the LID572/573/575. This is the easiest way to communicate with the LID572/573/575.

When the LID572/573/575 is plugged in for the first time, a driver has to be installed. The drivers are part of the Soft57x PC program (minimum version 6.20) which can be downloaded at www.dorset.nu.

After installation the drivers are located at:


“[Installation dir]\Drivers\WIN2000_XP”. In the following steps you will see how to install the driver.

After the LID572/573/575 is plugged in, the following window will show:



1. Choose
“Install from a list or specific location”

2. Click “Next”

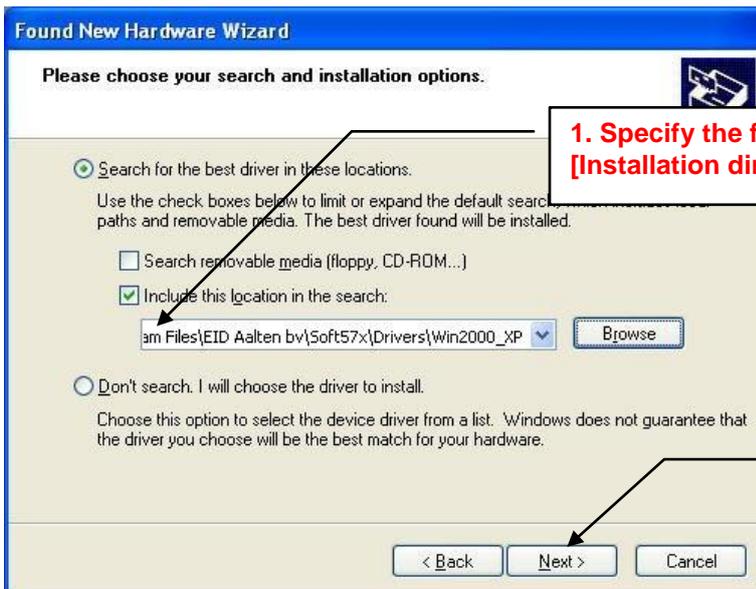

1. Specify the following search path:
[Installation dir]\Drivers\WIN200_XP

2. Click “Next”



Click "Continue Anyway"



Click on "Finish"

Special attention to Windows 8 users

This is a new 'problem' in Windows 8. It is a security issue of Windows 8. See the link below how to solve this.

<http://www.nextofwindows.com/how-to-install-an-un-signed-3rd-party-driver-in-windows-8/>